 


IBV-11-A CONFIGURATION GUIDE (M7954)



VECTOR ADDRESS
SELECT SWITCHES
(51)


DEVICE
(IBS & IBO REGISTERS)
ADDRESS SELECT
SWITCHES
(52)

on = Logical 1
off = Logical 0
X = don't care

Size Class	Number of Species
S2-1	1
S2-2	1
S2-3	1
S2-4	1
S2-5	1
S2-6	1
S2-7	1
S2-8	1
S2-9	1
S2-10	3

	1	1					X	X	X	0
	off	off	off	off	off	on				
6			0		1					
						5			X	

Standard vector: 420

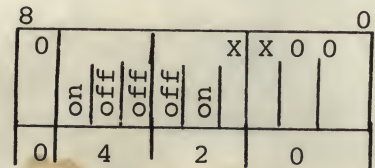

IEEE Bus	Function	Sl-8
IBVll-A is the only system controller on the IEEE bus	Enable ERRl Interrupts	OFF
Another system controller is connected to the IEEE bus	Disable ERRl Interrupts	ON

